

UK VISION

Quick Start Guide

SCAN FOR FULL USER MANUAL



or visit: www.ukvision.co.uk/support

MODEL:

UK-CA-3K-G1

This camera has a **mini joystick** on the cable. Push and hold it in a direction for **5-7 seconds** to change format.

DIRECTION	FORMAT
■ UP (hold 5-7 sec)	AHD
➔ RIGHT (hold 5-7 sec)	TVI (Best Quality)
■ DOWN (hold 5-7 sec)	CVI
■ LEFT (hold 5-7 sec)	CVBS (Basic)
● PRESS CENTER	Open Menu

■ **IMPORTANT: Wait 30 seconds after each switch before trying again!**

NO PICTURE? FOLLOW THESE STEPS

STEP 1: Switch to CVBS First

Push joystick **LEFT** for 5-7 seconds → Wait 30 seconds.
You should see a low quality image. This confirms camera works.

STEP 2: Switch to TVI

Push joystick **RIGHT** for 5-7 seconds → Wait 30 seconds.
If you get picture, you're done! If not, continue below.

STEP 3: Still No Picture?

Your DVR may need a different resolution. Try this:

- Push **RIGHT** again for 5-7 sec → Wait 30 sec
- Still no picture? Push **RIGHT** again → Wait 30 sec
- Repeat up to **3 times** - this cycles through resolutions.

STEP 4: Tried 3 Times with No Picture?

The problem is likely your **cable** or **power supply**:

- Test with a different camera (if available)
- If different camera works = your camera may be faulty
- If different camera also fails = BNC cable or PSU problem

■ **FOR AUDIO:** Camera must be on **TVI** format. Enable "AOC" in your DVR audio settings.

NEED HELP?

Visit www.ukvision.co.uk for:

- Online support & live chat
- Video tutorials
- Replacement BNC cables & power supplies
- Full user manual download

© UKVISION | Model: UK-CA-3K-G1 | 5MP (3K) ColorVu Camera

SCAN FOR FULL USER MANUAL



or visit: www.ukvision.co.uk/support

